

WIRELESS CONTROLLER SETUP

The handheld transmitter(s) and hoist receivers must be “paired” to work with each other. This operation is necessary any time either device is replaced.

1. Disconnect (unplug) the power supply to the lift.
2. Remove the battery of the transmitter.
3. Turn the green dial off.

To configure a new transmitter to work with an existing hoist receiver, follow these steps:

1. Turn green knob to off.
2. Press and **hold both** the "**STOP**" and "**UP**" buttons while inserting the batteries. Wait for the red LED light of the transmitter to begin to flash rapidly. Then release the buttons.
3. Plug in the Lift. The red LED light of the transmitter will change from fast flash to slow flash.
4. Press the "DOWN" key to complete the coding operation.
5. Turn the green knob on the transmitter to “ON” and press the START button.

(Transmitters with a **BD** in the serial number on the back will need to have the **START BUTTON** pressed for 10 seconds)

6. Test the Down and Up buttons.

The lift is now operational. (Check that the Battery compartment is secured)